

# Birlea®

## Assembly Instructions

Thank you for  
purchasing a  
Birlea product

For a chance to win a Love2Shop voucher simply post a picture of your new product on your preferred social channels tagging Birlea Furniture. One winner will be selected at random each month.

\*Terms & conditions may apply.

### Are you happy with your purchase?


**Yes:** That's great, we would love to hear more from you. Please leave us a review on our Trustpilot link on the QR code here. Your feedback will be greatly appreciated.




**No:** If for any reason there is something missing, indifferent or incorrect with your order, please contact the retailer that you purchased your item from.

Please note that this items build time is around 60 min.


**5'0 CORONA  
HIGH END BED**

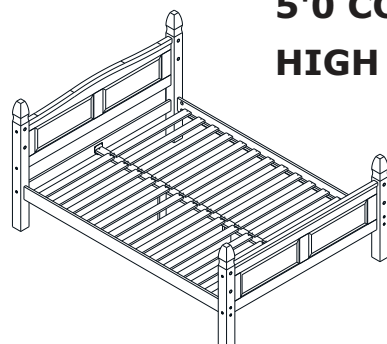


[www.birlea.com](http://www.birlea.com)

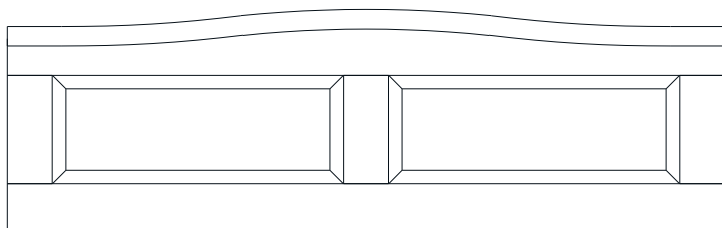

**1** Headboard panel (147 x 49cm) - Box 1



**2** Headboard rail (147 x 9.2cm) - Box 1

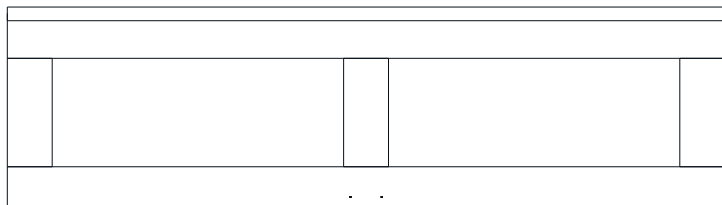

**3** Footboard panel (147 x 41.9cm) - Box 1



**8** Side rail x 2 (200 x 11.2cm) - Box 2



**9** Centre rail (205.5 x 6.5cm) - Box 2



**10** Slat x 28 (76 x 6.5cm) - Box 1



**11** Support leg x 2 (28.3 x 6.5cm) - Box 1



**4** Left headboard post (110 x 8.2cm) - Box 2



**5** Right headboard post (110 x 8.2cm) - Box 2



**6** Left footboard post (88 x 8.2cm) - Box 2

















**7** Right footboard post (88 x 8.2cm) - Box 2




**12** Hardware Kit x 1 - Box 2

### HARDWARE LIST - Box 2

| Part     | Item   | Qty | Part     | Item   | Qty |
|----------|--|-----|----------|--|-----|
| <b>A</b> | 30mm dowel  | 10  | <b>H</b> | 120mm Bolt        | 10  |
| <b>B</b> | 40mm dowel  | 4   | <b>J</b> | 130mm Bolt        | 8   |
| <b>C</b> | 16mm Screw  | 8   | <b>K</b> | Half moon nut     | 8   |
| <b>D</b> | 30mm Screw  | 56  | <b>L</b> | Metal bracket     | 2   |
| <b>E</b> | 32mm Bolt   | 2   | <b>M</b> | Round metal stud  | 8   |
| <b>F</b> | Nut         | 2   | <b>N</b> | Allen key         | 1   |
| <b>G</b> | 50mm Bolt   | 2   | <b>O</b> | Spacer            | 2   |

You will need a screwdriver, small mallet and M11 spanner (not provided).

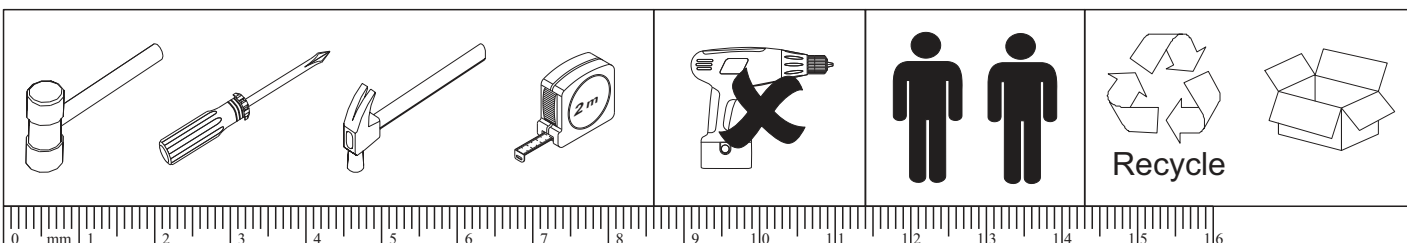


**Step 1:** Join the support legs (11) to the centre rail (9) using hardware N and G.


Vendor: S000238

Insert hardware part B to the side rails (8) using a small mallet (not provided).

**DO NOT use any power tools as this may damage the frame and will invalidate any claim.**

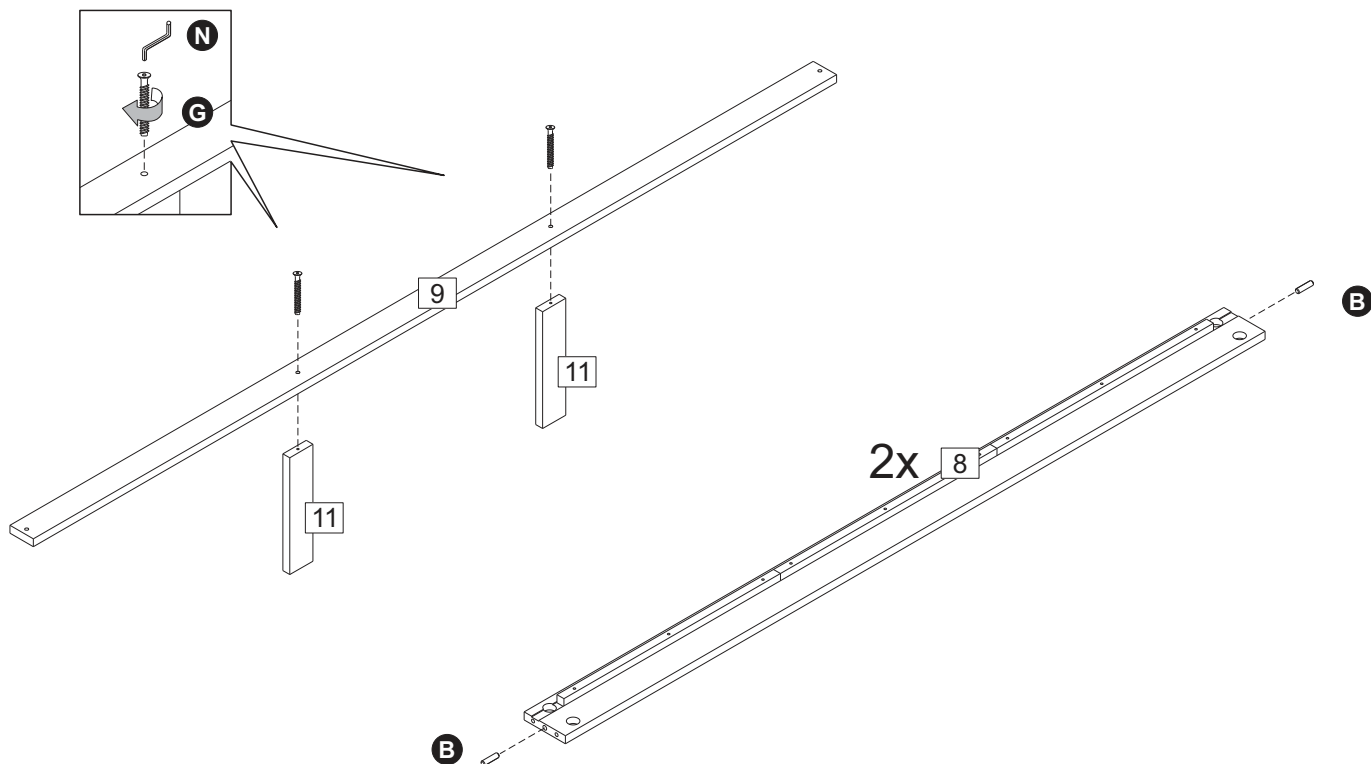


**Step 2:** Insert hardware part A to the headend panel (1), footboard panel (3) and Headboard rail (2) using a small mallet (not provided).

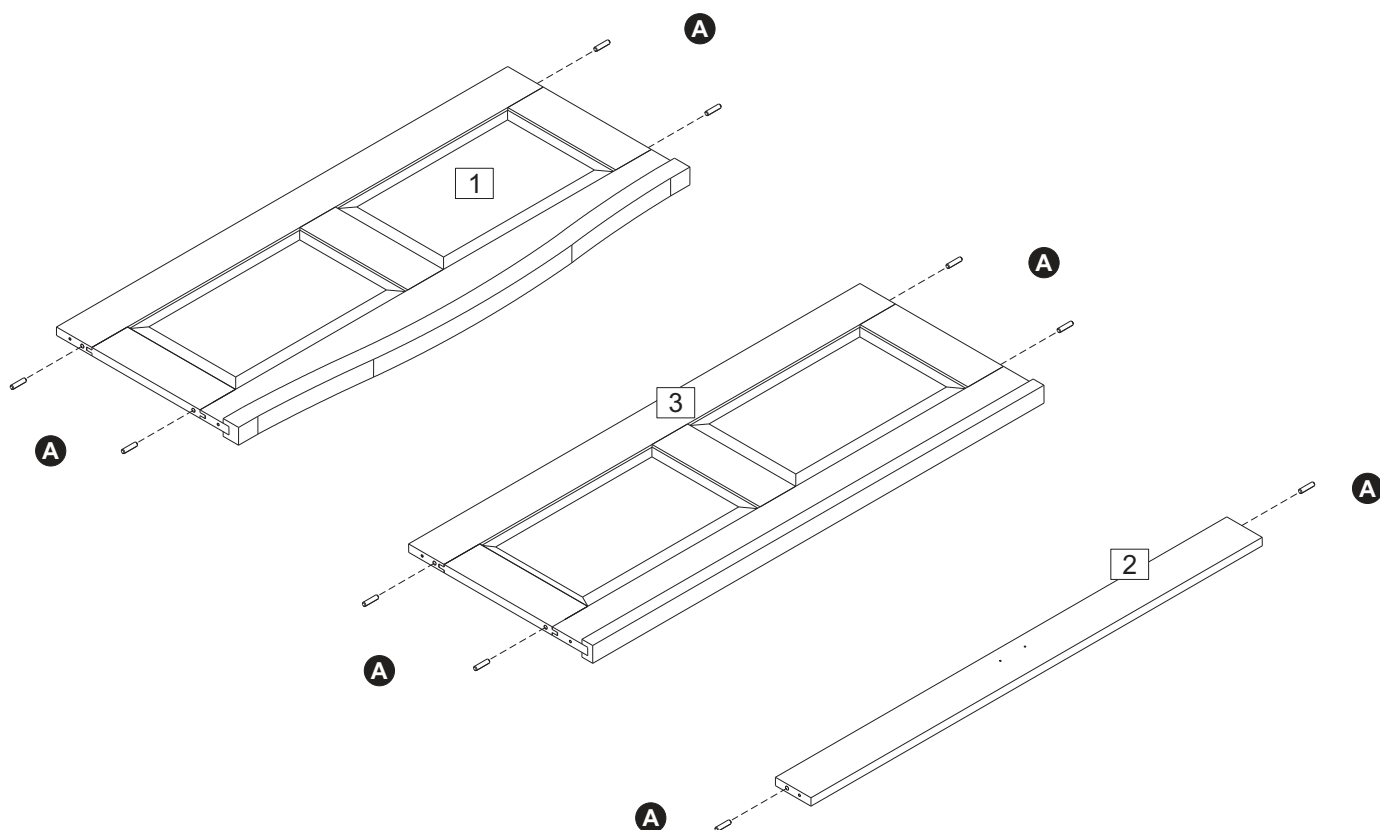


**Step 3:** Attach the left headboard post (4) and right headboard post (5) to the headend panel (1) and headend rail (2) using hardware parts N and H.  
**DO NOT use any power tools as this may damage the frame and will invalidate any claim.**

Vendor: S000238

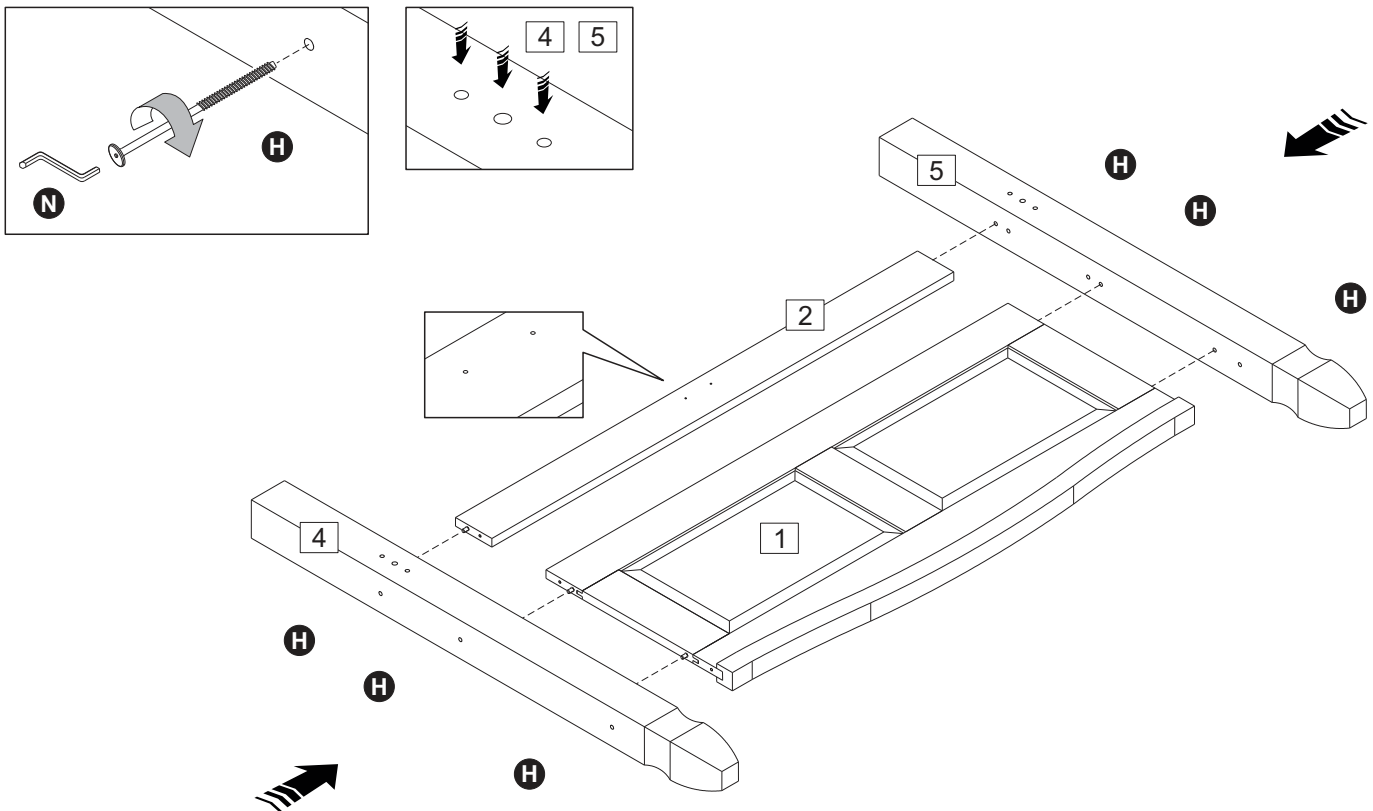


**Step 4:** Attach the left footend post (6) and right footend post (7) to the footend panel (3) using hardware parts N and H.  
**DO NOT use any power tools as this may damage the frame and will invalidate any claim.**

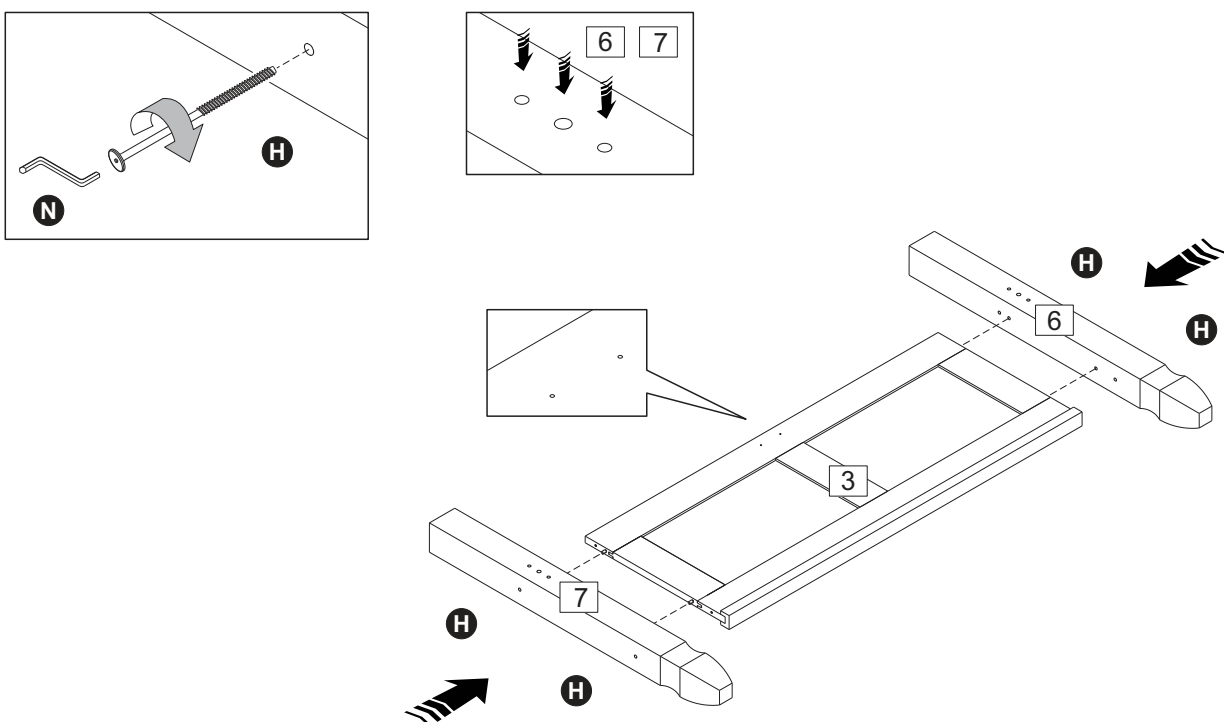


**Step 5:** Fix hardware parts L to the headboard rail (2) and footboard panel (3) using hardware part C and a screwdriver (not provided). Vendor: S000238

**DO NOT use any power tools as this may damage the frame and will invalidate any claim.**

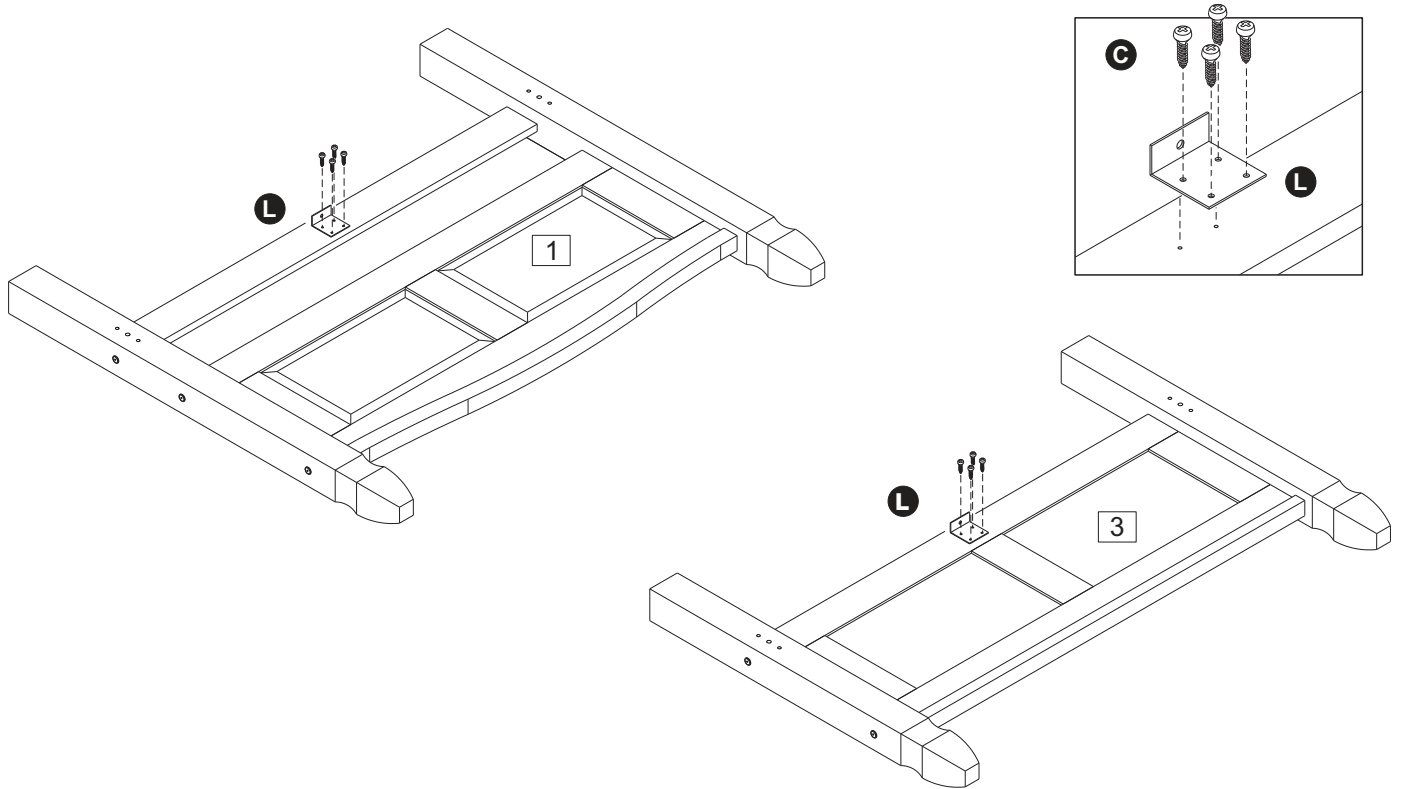

**Step 6:** Attach the side rails (8) to the headboard posts using hardware parts N, J and K. Fix the centre rail (9) using hardware parts E and F with an M11 spanner (not provided).




**DO NOT use any power tools as this may damage the frame and will invalidate any claim.**

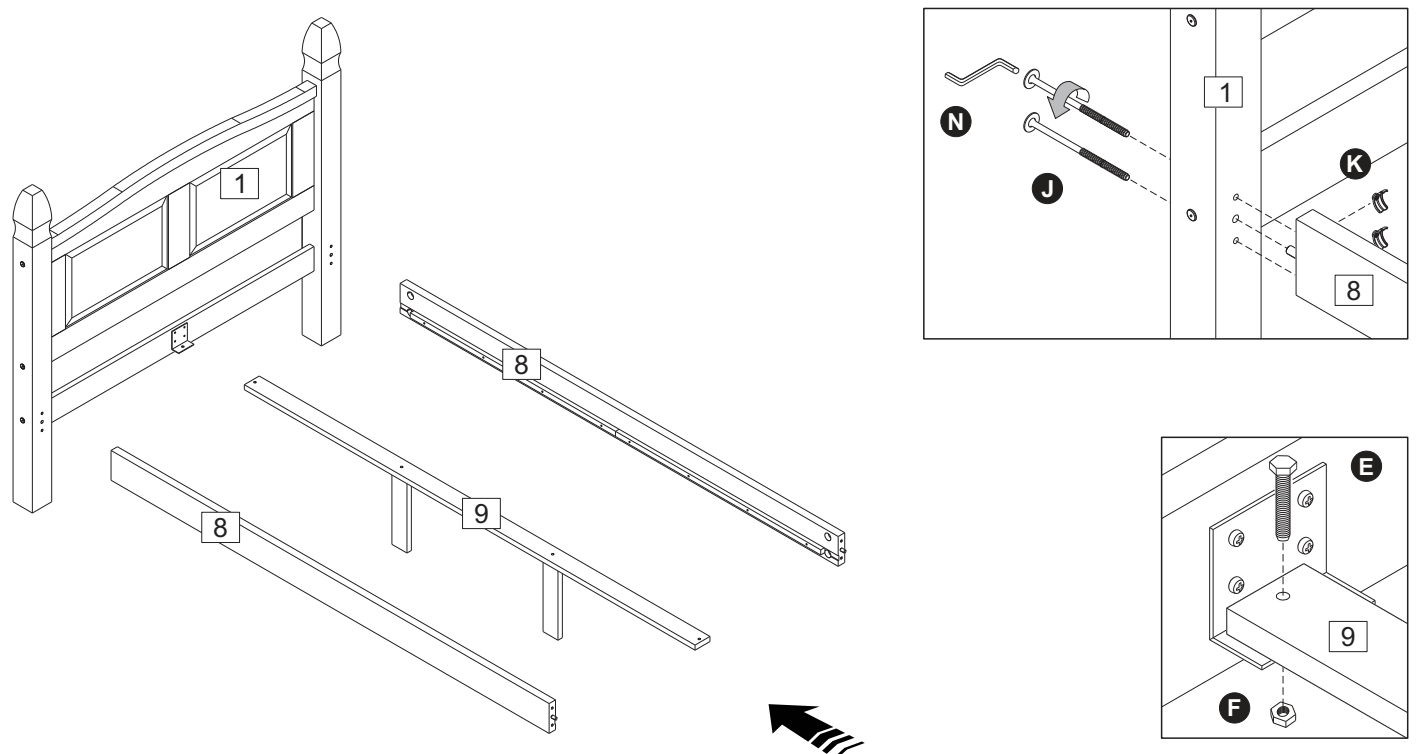

**Step 7:** Attach the footend using hardware parts N, J and K and fix the centre rail (9) in place using hardware parts E and F with an M11 spanner (not provided).


Vendor: S000238

**DO NOT use any power tools as this may damage the frame and will invalidate any claim.**

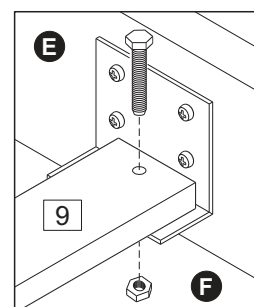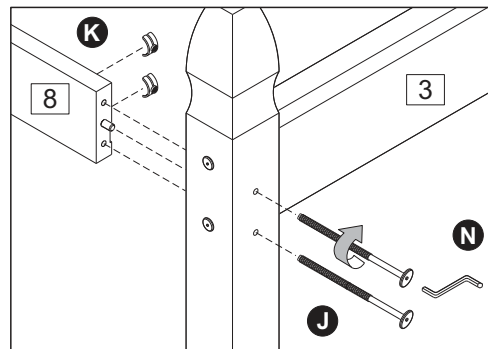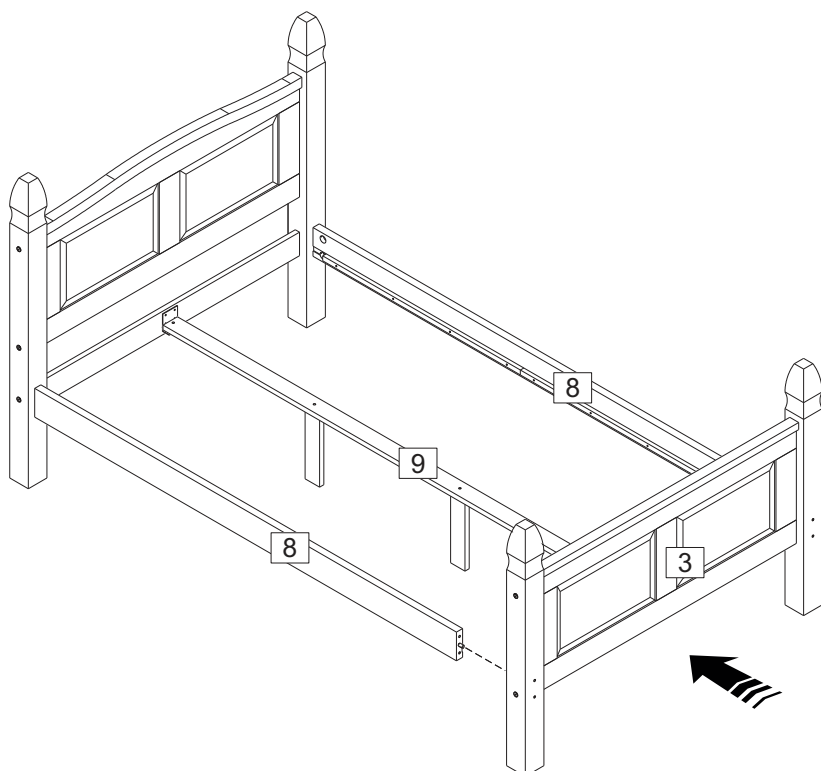


**Step 8:** Fix slats (10) to the side rails (8) and centre rail (9) using hardware parts O and D with a screwdriver (not provided). Make sure to start from the ends and work towards the middle.


**DO NOT use any power tools as this may damage the frame and will invalidate any claim.**

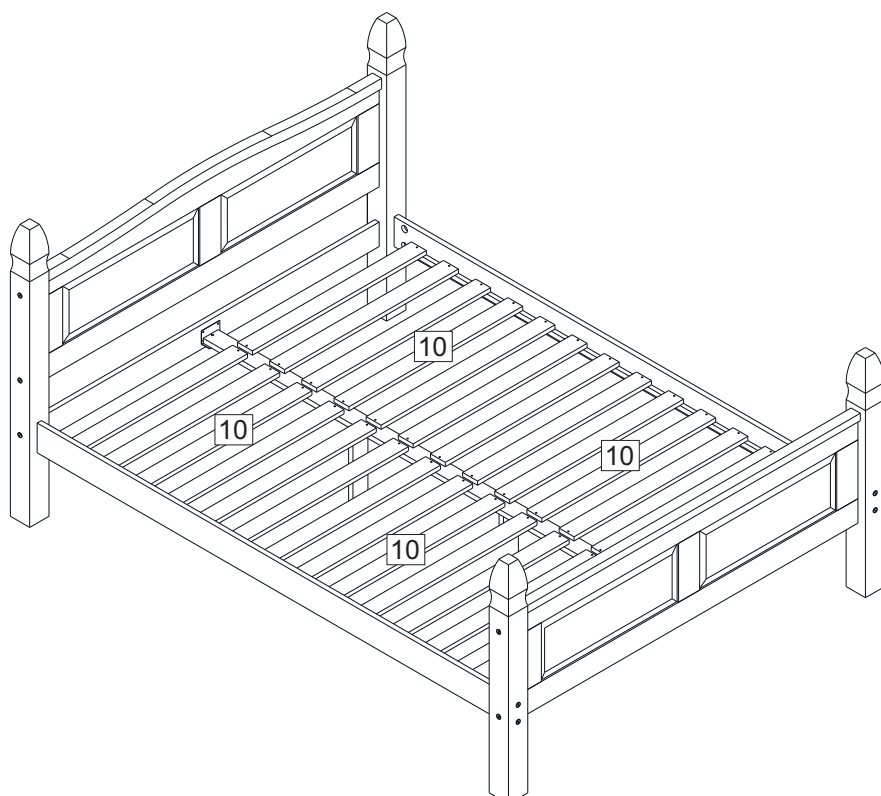

**a:**

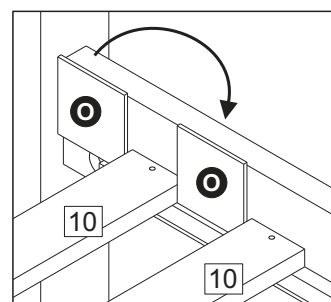



**b:**

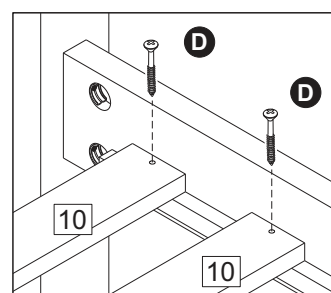

**Step 9:** Insert hardware part M using a small mallet (not provided).

Vendor: S000238

**DO NOT use any power tools as this may damage the frame and will invalidate any claim.**

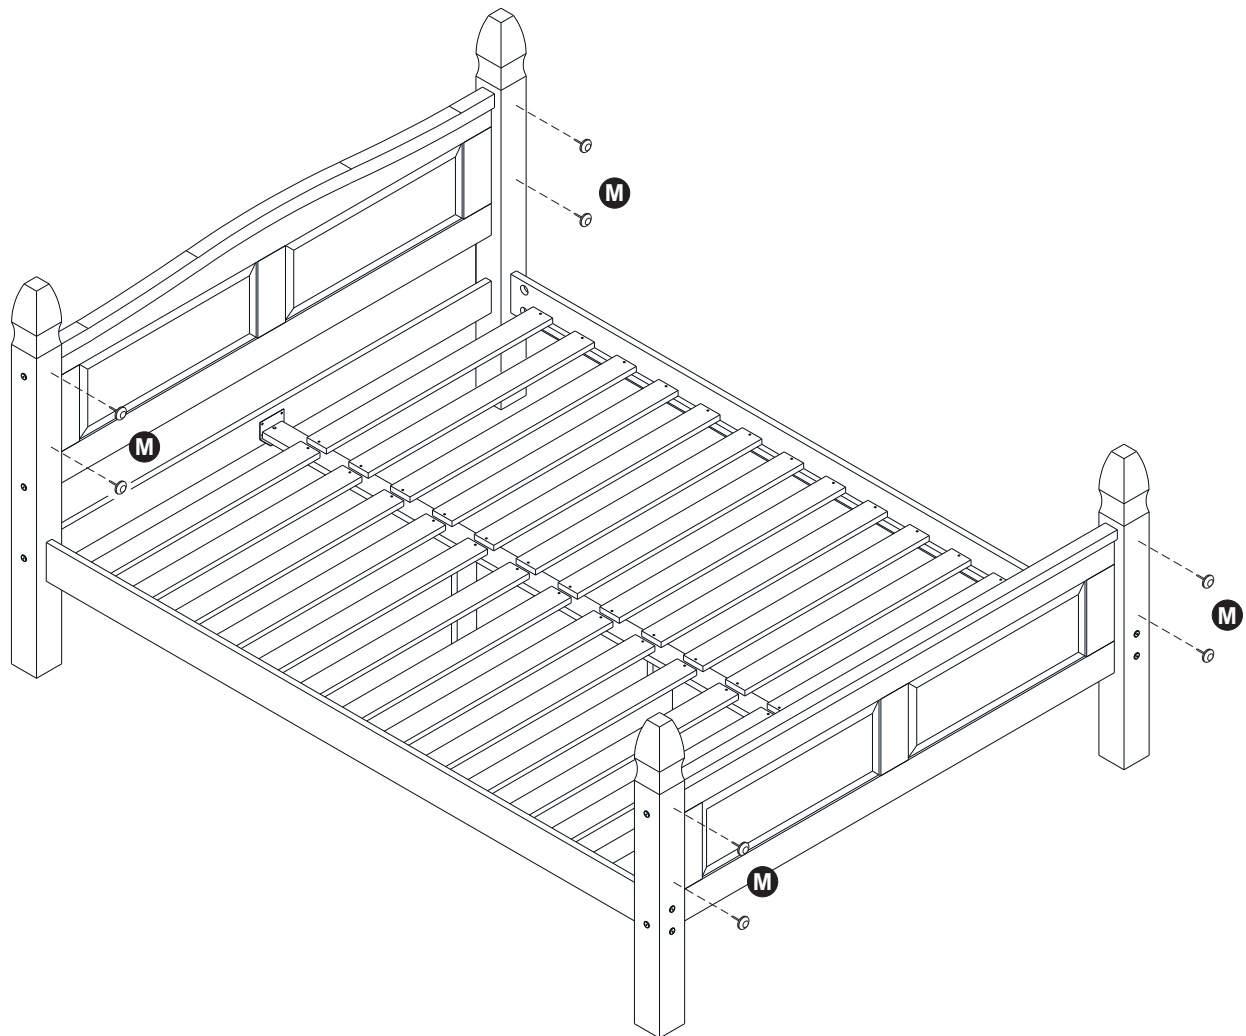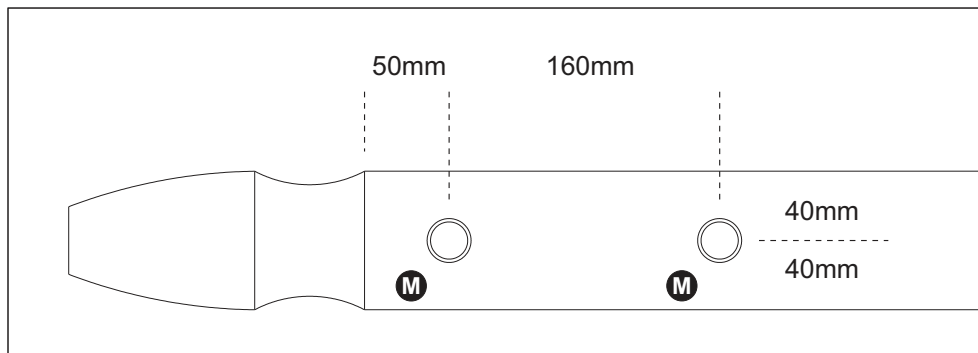

### Additional Information:

- For complete product information, images and dimension diagrams please visit the website [www.birlea.com](http://www.birlea.com)
- If you have any issues with your item please contact the retailer directly you purchased it from who will be able to resolve any issues with Birlea.
- Why don't you send us photos of your assembled furniture to [info@birlea.com](mailto:info@birlea.com) to be shared in our #birleahome feature on Instagram.



**Birlea**

Suppliers of inspiration