

Birlea®

Assembly Instructions

Thank you for
purchasing a
Birlea product

For a chance to win a Love2Shop voucher simply post a picture of your new product on your preferred social channels tagging Birlea Furniture. One winner will be selected at random each month.

*Terms & conditions may apply.

Are you happy with your purchase?

Yes: That's great, we would love to hear more from you. Please leave us a review on our Trustpilot link on the QR code here. Your feedback will be greatly appreciated.



No: If for any reason there is something missing, indifferent or incorrect with your order, please contact the retailer that you purchased your item from.

Please note that this items build time is around : 60mins



www.birlea.com

ASSEMBLY INSTRUCTIONS 135CM BELMONT OTTOMAN GREY

IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY BEFORE ASSEMBLING OR USING YOUR 135CM BELMONT OTTOMAN GREY

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

HEALTH & SAFETY:

DO NOT jump on this bed frame.

DO NOT use this bed frame if any parts are missing, damaged or worn.

DO NOT use this bed frame unless all fixings are secured.

Please keep small parts out of reach of children.

Always use on a level, even surface.

WARNING: If this bed is placed on a non-carpeted floor you must place some protection under all legs to stop the bed frame from moving. If this is not adhered to there is no guarantee if the bed frame collapses.

WARNING: Take care when assembling the base, assemble the ottoman as close to its final position. The ottoman has a powerful mechanism and after assembly should only be opened when the bed mattress is in place.

CARE & MAINTENANCE:

Assemble in the room of use.


Periodically check all screws & fixings to ensure they are secure.






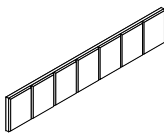
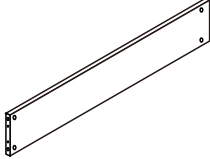









DO NOT push the bed frame as this will damage the legs.

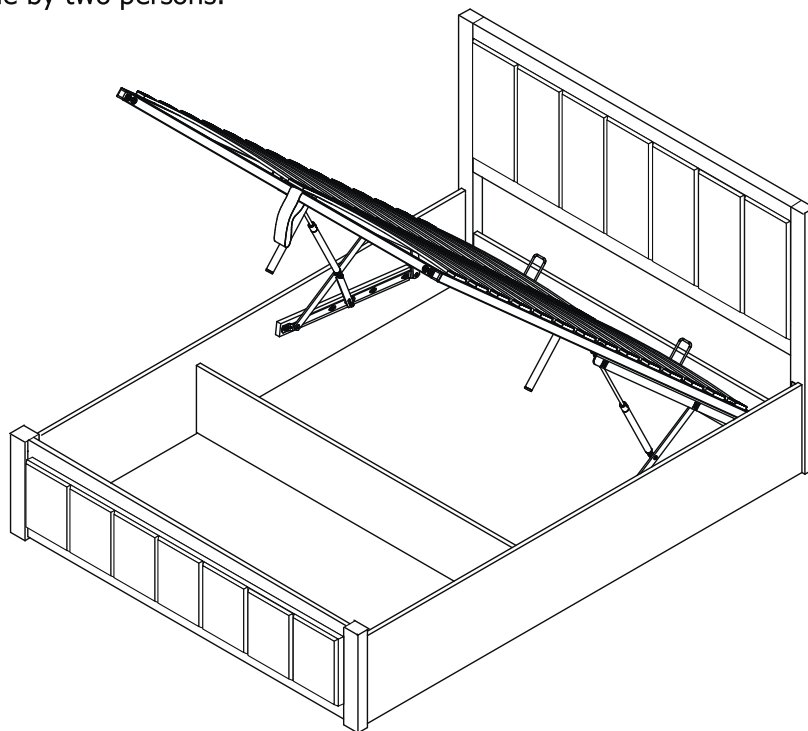Always lift the bed with two people to reposition.

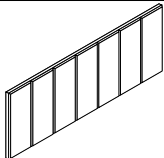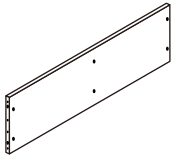Keep any sharp objects away from the frame.










Assembly must be done by two persons.







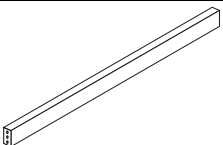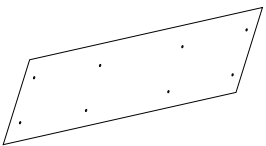






















Parts List			
Parts	Description	QTY	BOX
1	Headboard cushion 	1	1/3
2	Footboard 	1	
3	Left Side Rail 	1	2/3
4	Right Side Rail 	1	
5	Hydraulic Arm Spacer 	2	
6	Footboard cushion 	1	1/3
7	Centre Storage Panel 	1	2/3
11	Left Side Metal Bar 	1	3/3
12	Right Side Metal Bar 	1	
15	Centre Metal Bar 	1	
13	Headboard End Metal Bar 	1	
14	Footboard End Metal Bar 	1	
16	Support Leg 	2	
8	Slat 	36	
9	Headboard Left Leg 	1	1/3
10	Headboard Right Leg 	1	

Birlea®

Birlea Furniture Limited – Registered Office Unit 6a-1, Birlea Way, West Meadow Rise, Castle Donington, Derbyshire, DE74 2HL, UK

Parts List			
Parts	Description	QTY	BOX
17	Headboard Connect Panel 	2	1/3
23	Headboard Back Panel 	1	
24	Headboard Support Panel 	2	2/3
20	Headboard Bottom Connect Panel 	1	
21	Footboard Left Connect Panel 	1	1/3
22	Footboard Right Connect Panel 	1	
18	Left Hydraulic Base Support c/w Pump Stopper 	1	3/3
19	Right Hydraulic Base Support 	1	
25	Hydraulic Base Pump 	2	


Birlea®

Hardware List (Found in box 3)				
Parts	Description		Qty	Box
A	Mini Fix		4	3/3
B	8x30 mm Wooden Dowel		8	3/3
C	Metal Corner Block		2	3/3
D	8x40 mm Wooden Dowel		14	3/3
E	Screw		14	3/3
F	10x40 mm Wooden Dowel		4	3/3
G	M8x15 mm JCBC Bolt		32	3/3
H	M8x45 mm JCBC Bolt		14	3/3
I	Sticker		28	3/3
J	Base Handle		2	3/3
K	M8 Nut		4	3/3
L	Plastic Washer		8	3/3
M	Single Slat Cap		36	3/3
N	Double Slat Cap		18	3/3
O	Screw M6x30mm		4	3/3
P	Belt Handle		1	3/3
Q	Washer Bracket		4	3/3
R	Flat Washer		30	3/3
S	M8x40 mm JCBC Bolt		8	3/3
T	Screw M6x25mm		4	3/3
U	M8 Allen Key		1	3/3
V	M12.8 Spanner		1	3/3
W	Washer Bracket		6	3/3
X	Spring Washer		30	3/3
Y	Screws by M4x25mm		12	3/3
Z	Screws by M4x35m		6	3/3
a	M6 Allen Key		1	3/3

** You will also need a screwdriver and small mallet (not provided).

Step 1: Join together two pieces headboard connect panel (17) with two pieces headboard support panel (24) by wooden dowel (D).

DX8

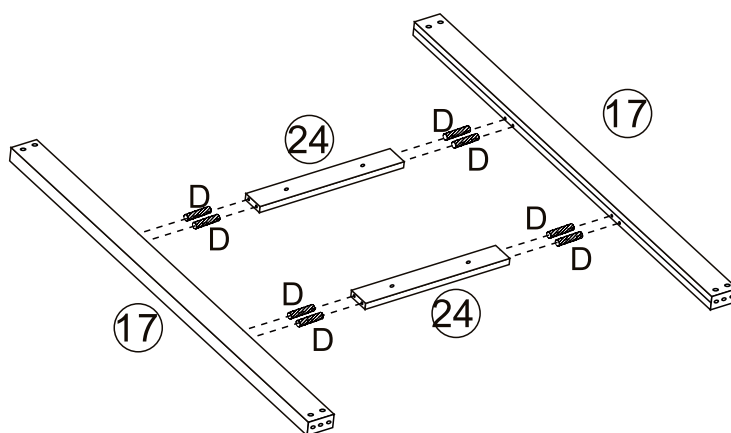


Step 2: Attach the headboard left leg (10) with two connect panel (17) by hardware (E,F,I);

IX8

EX4

FX2

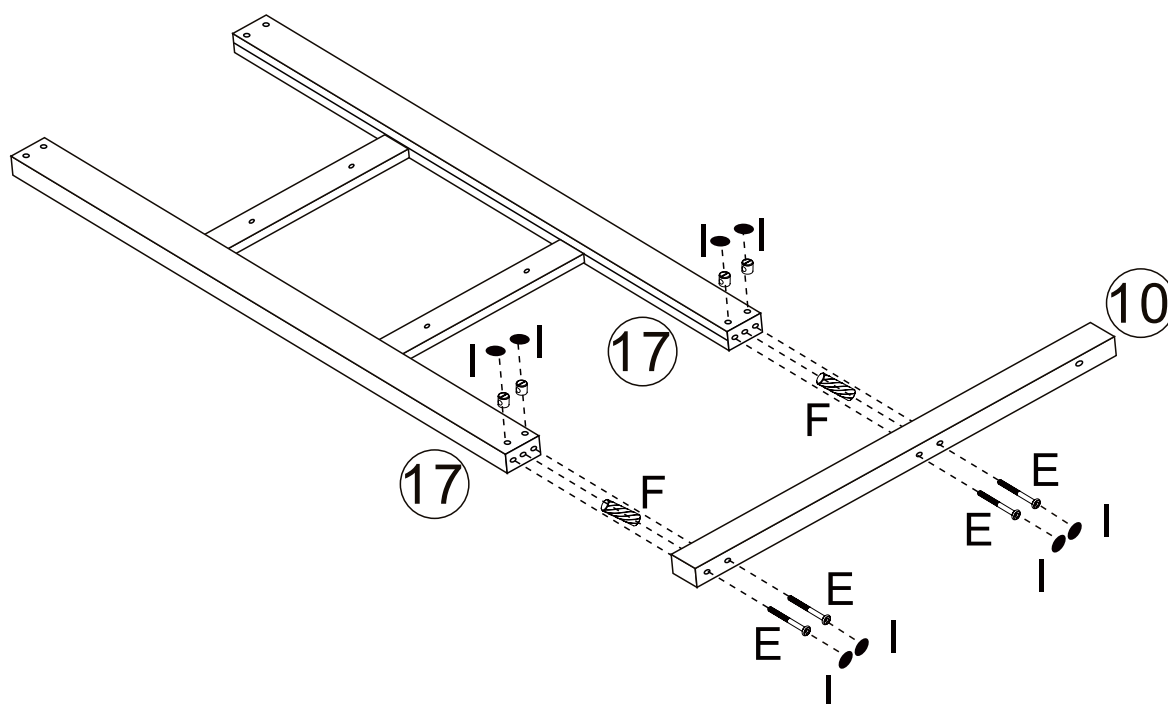


Birlea®

Birlea Furniture Limited – Registered Office Unit 6a-1, Birlea Way, West Meadow Rise, Castle Donington, Derbyshire, DE74 2HL, UK

Step 3: Attach the headboard back panel (23) with the frame.


Make sure the back panel (23) insert the leg (10).

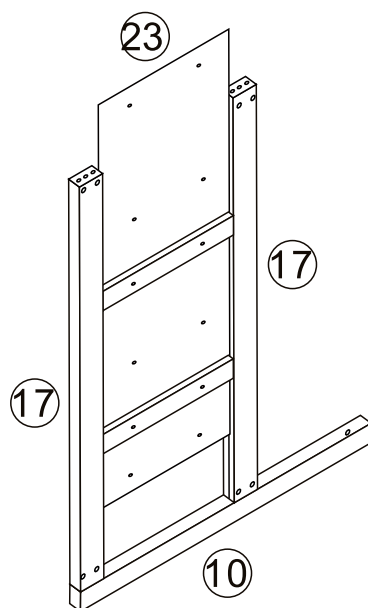

Step 4: Fix the panel (20) with the leg (10) by (B,E,I).

Then fix the right leg(9) with the frame by Hardwares(B, E, F,I).

IX12
EX6
FX2
BX4

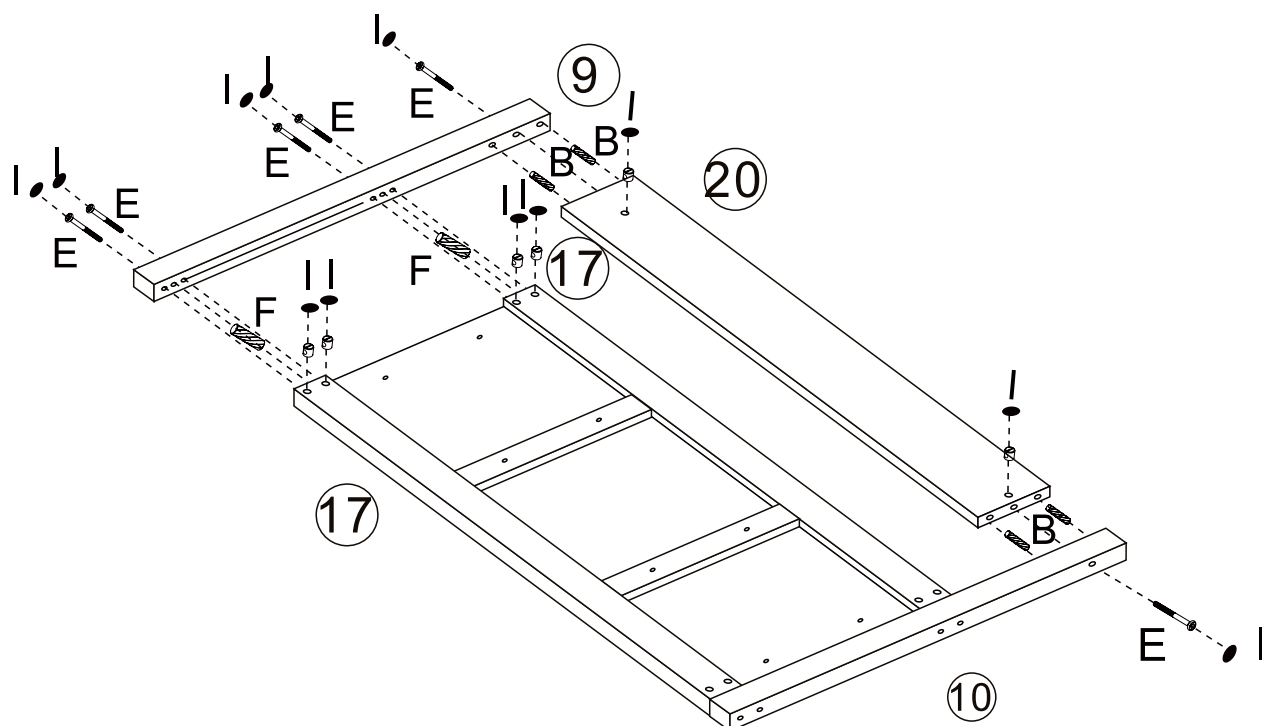


Birlea®

Birlea Furniture Limited – Registered Office Unit 6a-1, Birlea Way, West Meadow Rise, Castle Donington, Derbyshire, DE74 2HL, UK


Step 5: Fix the headboard cusion(1) on the headboard frame by hardwares (T,Z).

TX4
ZX4

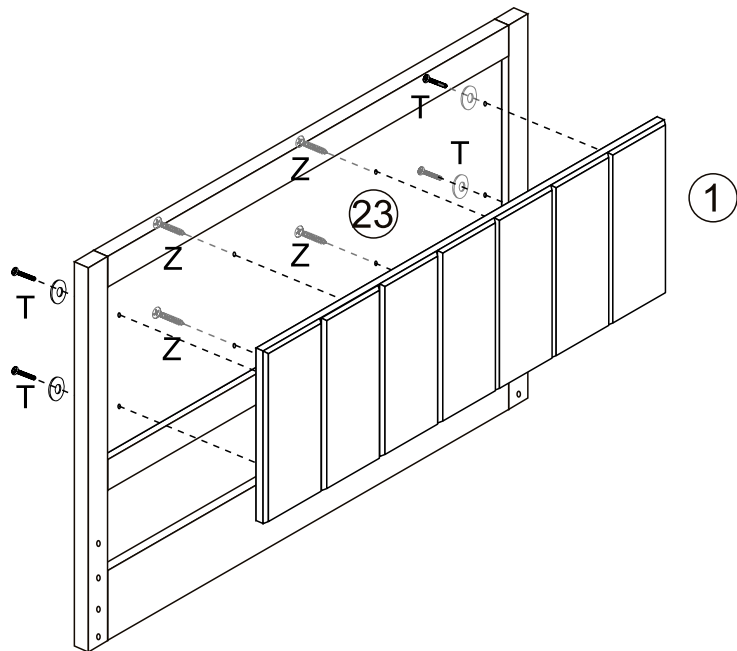

Step 6: Fix the footboard (2) with the legs (21, 22) by hardwares (D,E,I).

DX6
EX4
IX8

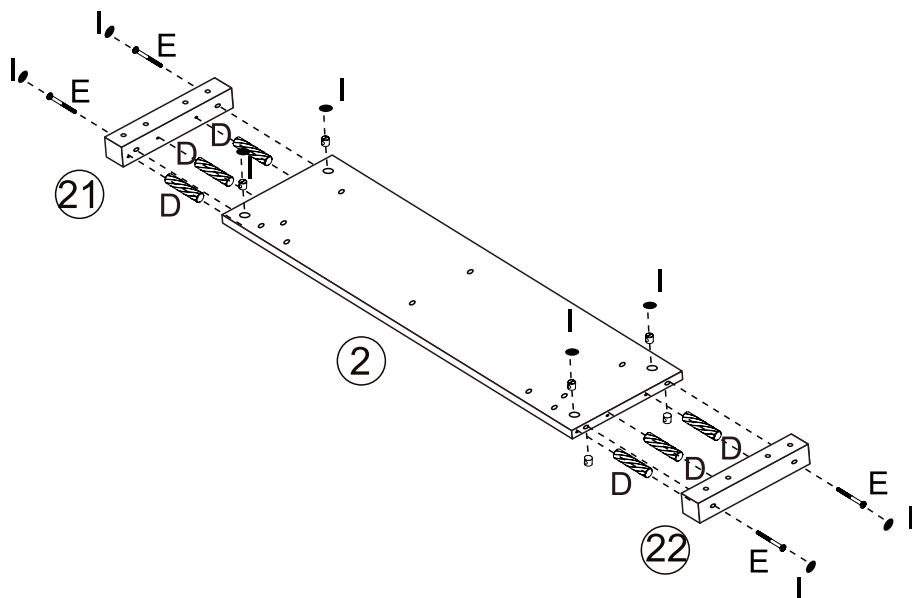


Birlea®

Birlea Furniture Limited – Registered Office Unit 6a-1, Birlea Way, West Meadow Rise, Castle
Donington, Derbyshire, DE74 2HL, UK

Step 7: Fix the footboard cushion(6) on the footboard frame by hardwares (O,Z).


OX4
ZX2

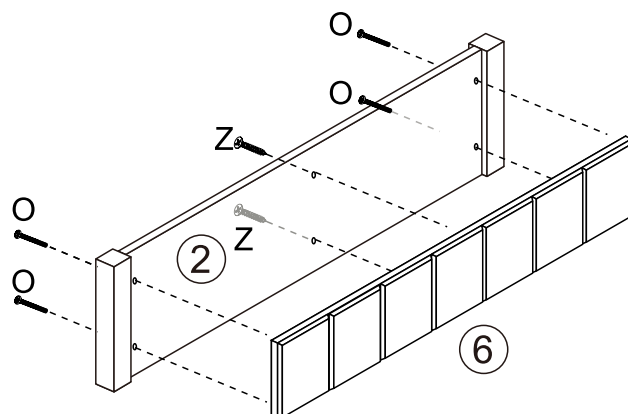

Step 8: Firstly, fix the hydraulic pump to each hydraulic base as shown in diagram 1.1. Next fix the left and right hydraulic spacer on to both side rails using screws (Y); Then fix the left and right hydraulic base on to the supports hydraulic spacer using bolts (H,L,X,R).

Ensure Plastic washers (part L) are used between the Hydraulic spacer (part 5) and the hydraulic base support (parts 18/19) as shown in the image.

Then screw the mini fit part A to both side rails as shown in diagram 1.2.

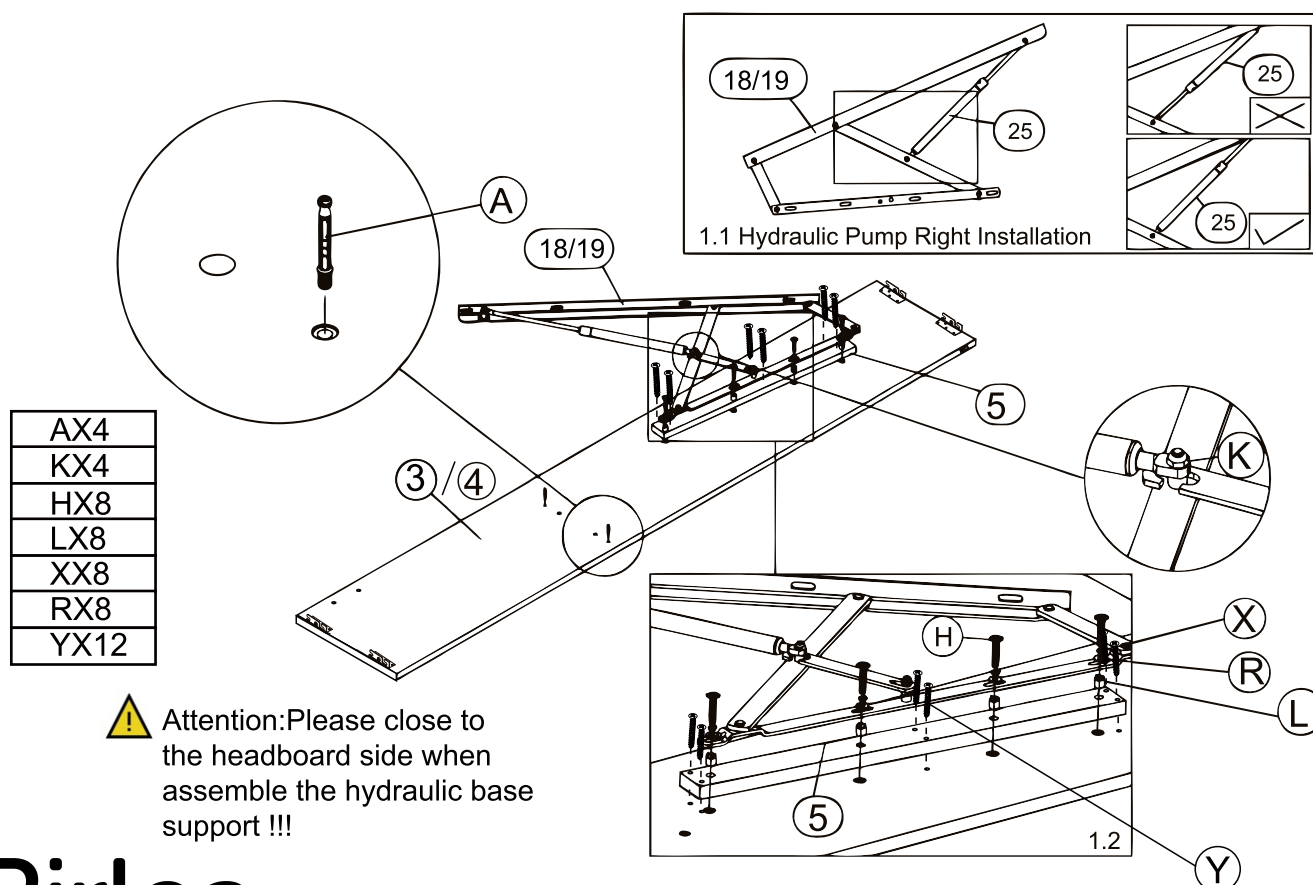


Birlea®

Birlea Furniture Limited – Registered Office Unit 6a-1, Birlea Way, West Meadow Rise, Castle Donington, Derbyshire, DE74 2HL, UK


Step 9: Join together the left side rail (3) and right side rail (4) with the centre storage panel (7) using hardware parts A and B.

AX4
BX4

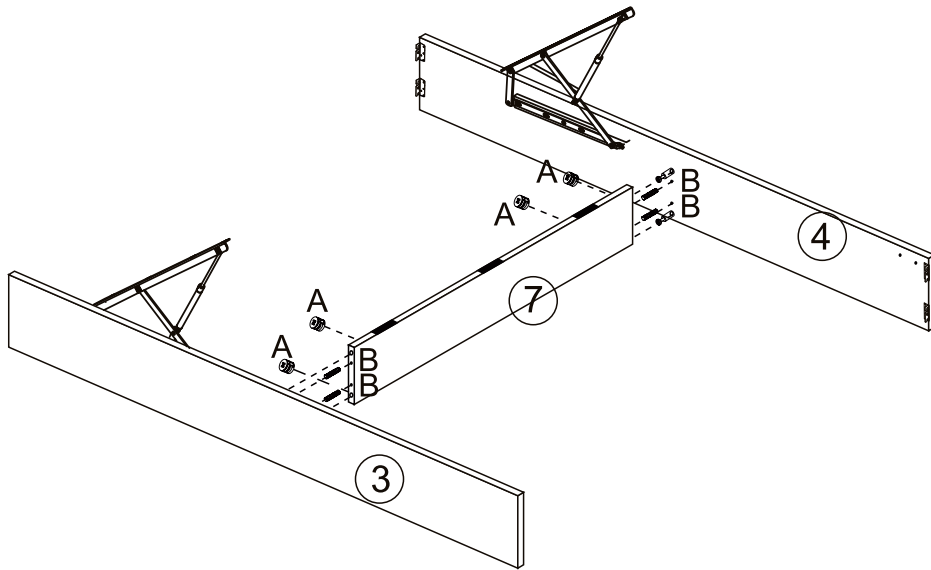

Step 10: Fix the Headboard frame and Footboard frame with the bed frame by Hardware(G).


GX16

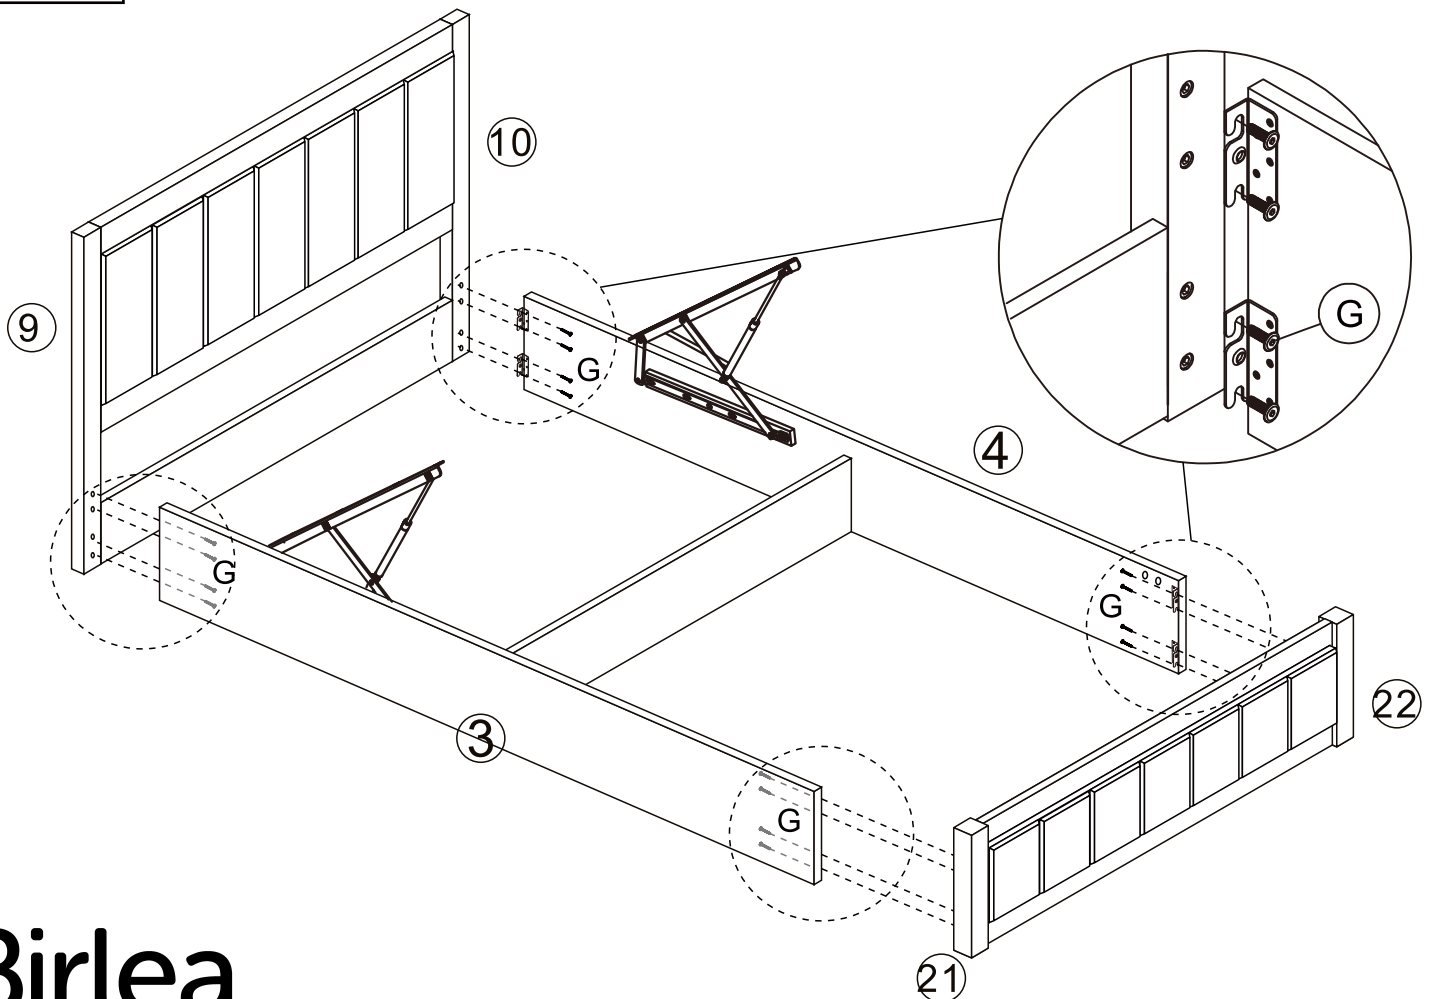

Birlea®

Birlea Furniture Limited – Registered Office Unit 6a-1, Birlea Way, West Meadow Rise, Castle Donington, Derbyshire, DE74 2HL, UK

Step 11: Fix the Metal Corner Block(C) by Hardware(G).

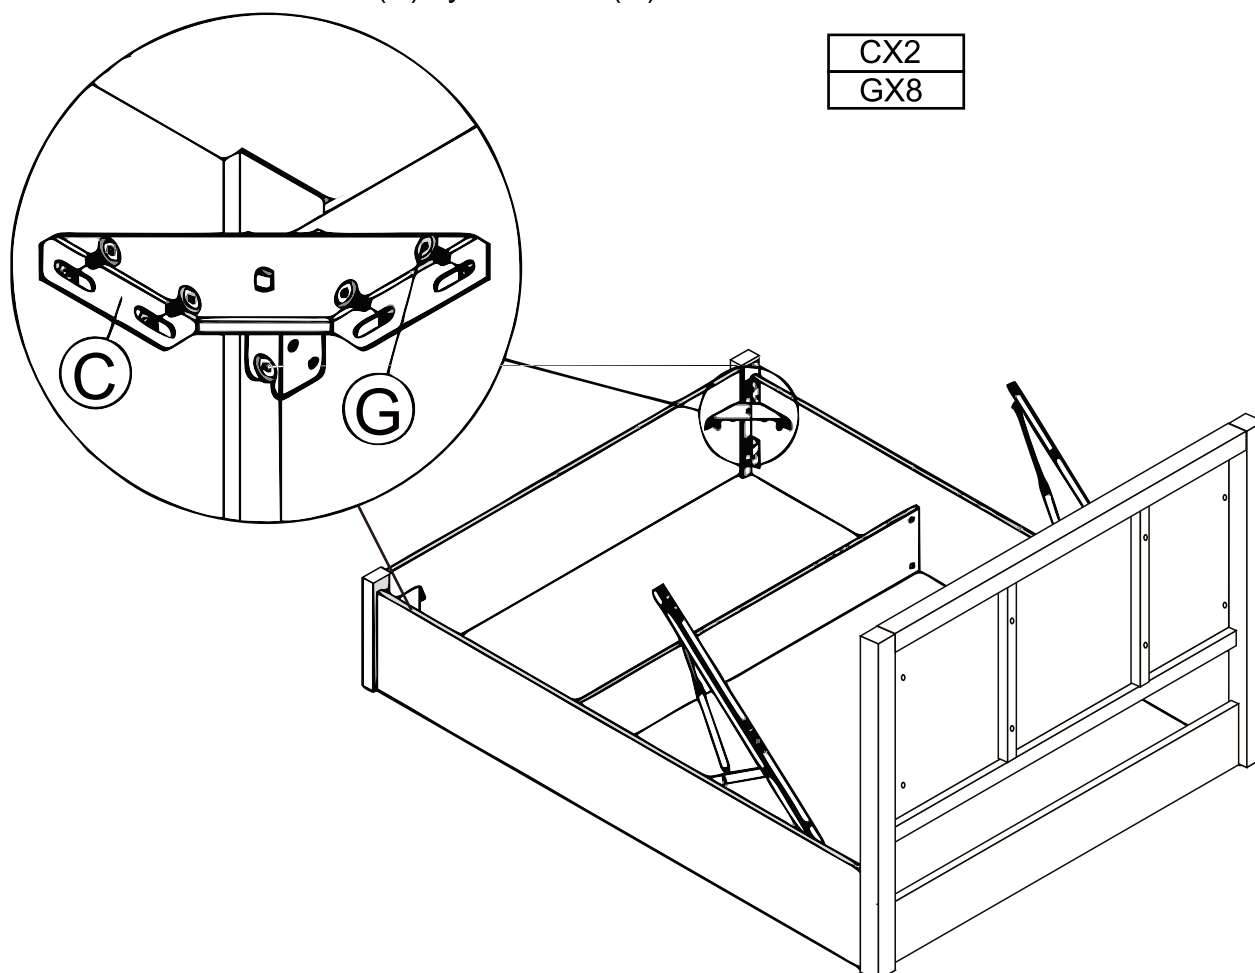


CX2
GX8

Step 12: Join together all the bed base parts (11),(12),(13) and (14) using hardware parts Q,S,X & R and also slide part P onto Part 14 before bolting together. Attach the centre rail(15) with Metal Frame by hardware G,X&R.And then attach hardware parts J as shown.

QX4
RX12
XX12
SX8
JX2
PX1
GX4


Important note:
Please assemble
follow arrow direction.

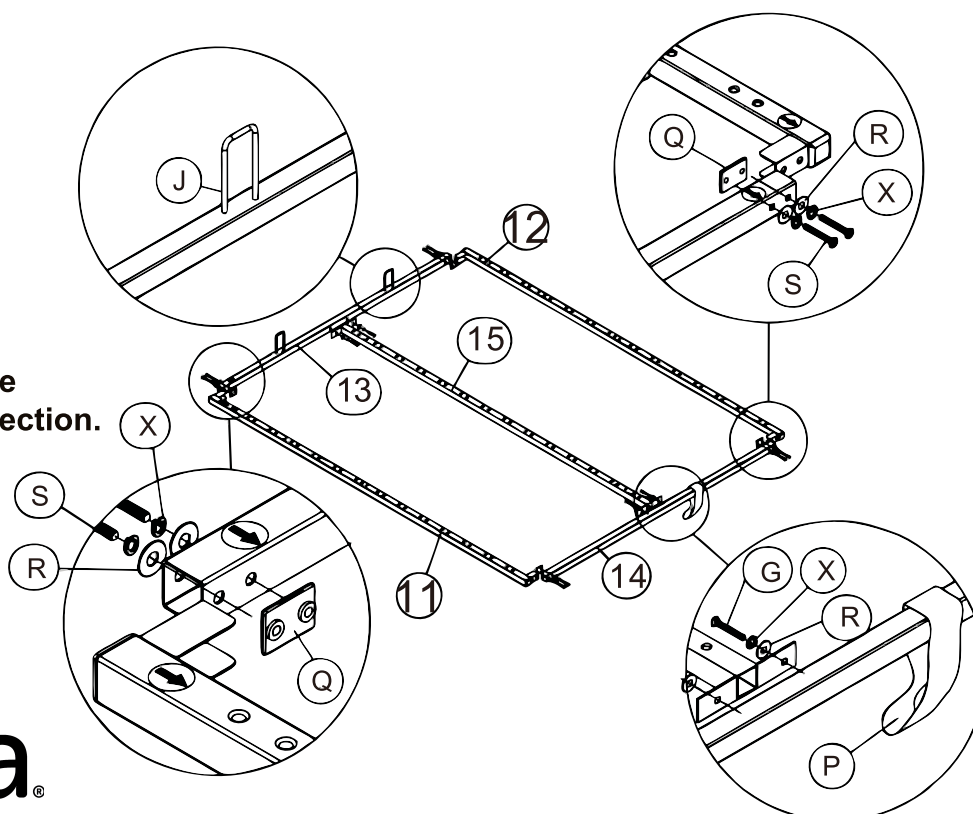

Birlea®

Step 13: Insert the slats (8) to hardware parts M and N then press into the base making sure they are secure.

MX36
NX18

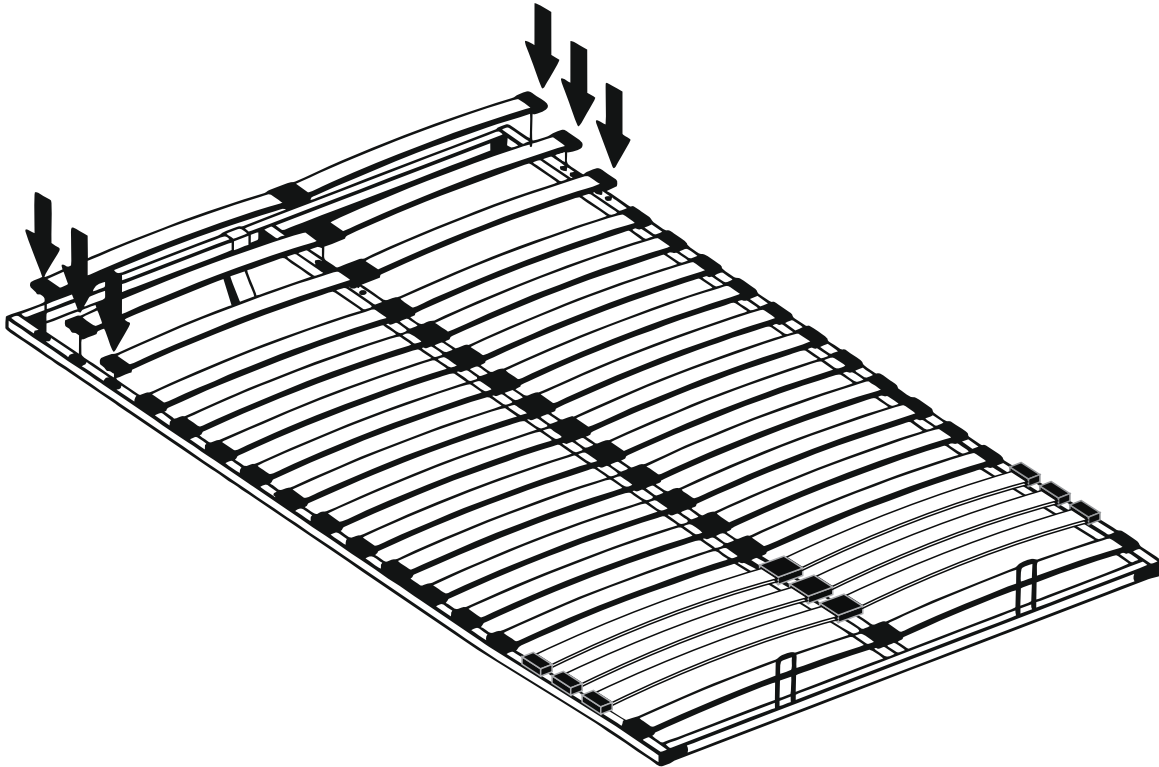


Birlea®

Birlea Furniture Limited – Registered Office Unit 6a-1, Birlea Way, West Meadow Rise, Castle
Donington, Derbyshire, DE74 2HL, UK

Step 14: Assemble the bed base on the right & left hydraulic frame starting from '1' to '3' as shown with Hardware H, X, R & W, and fix the support leg (16) to the bed base by Hardware G, X & R as shown.


Important note: Do not tighten the bolts yet!, and this assemble must be done by two persons.

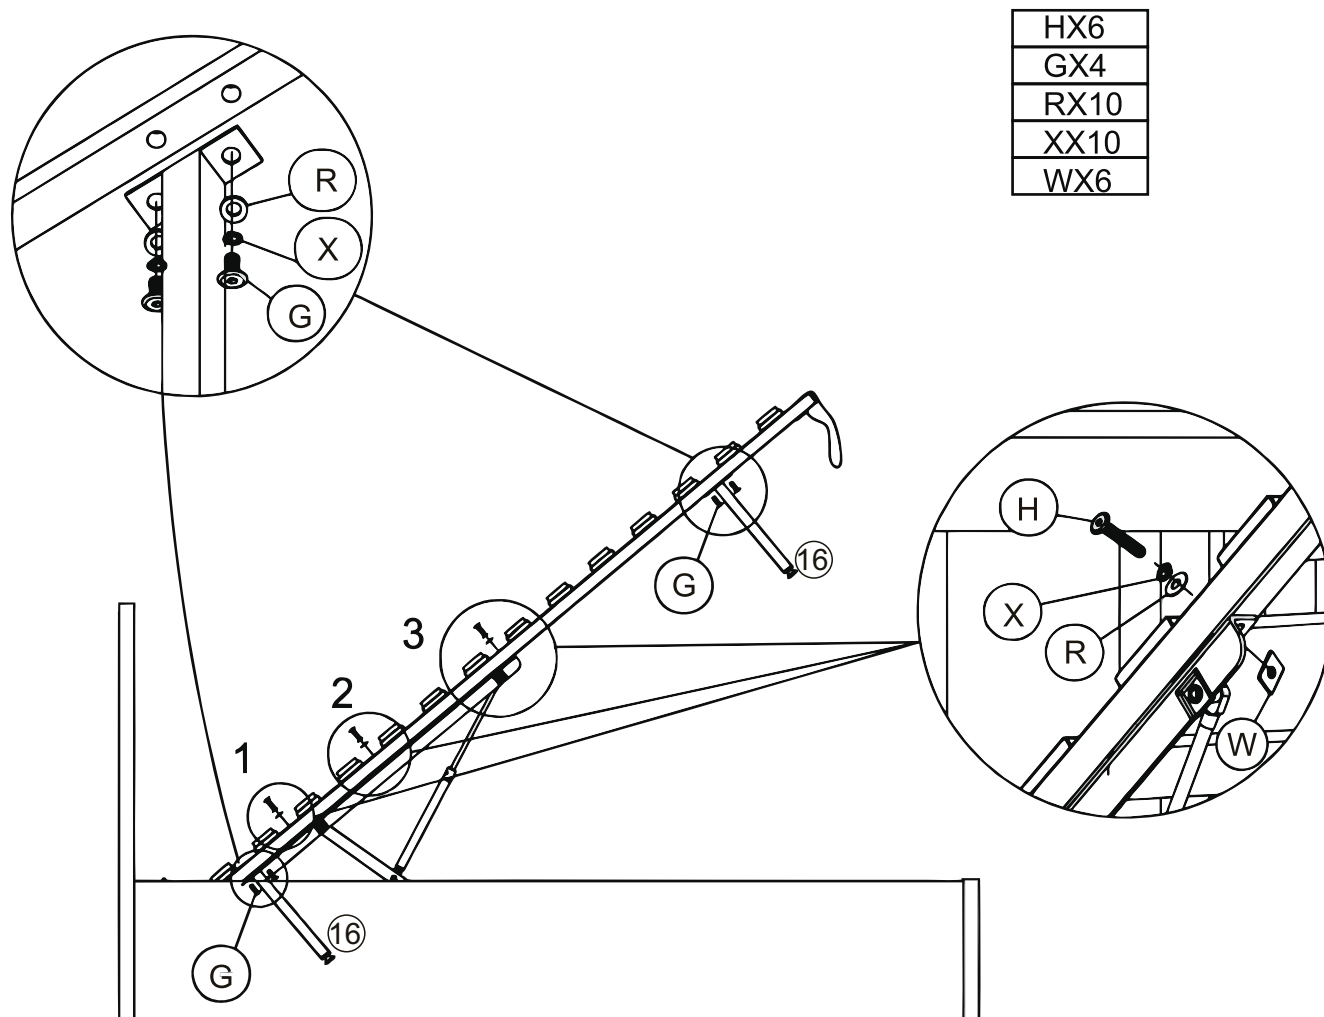

Birlea®

Birlea Furniture Limited – Registered Office Unit 6a-1, Birlea Way, West Meadow Rise, Castle Donington, Derbyshire, DE74 2HL, UK

Step 15: Adjust the bed base making sure that the distance to the footboard is approximately 15mm to above . Tighten all bolts and screws now.

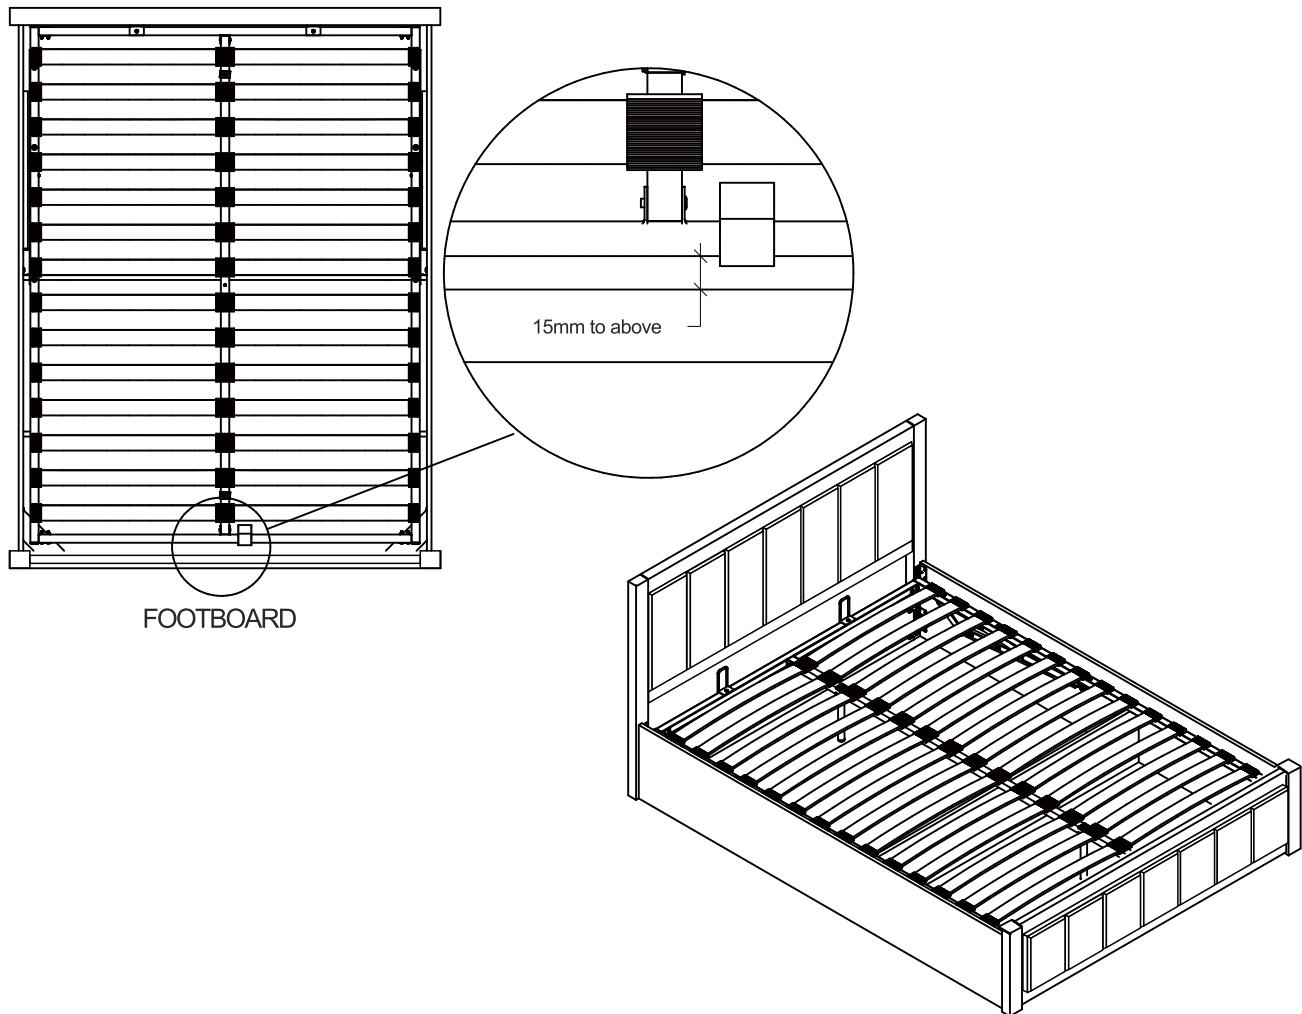

Additional Information:




- For complete product information, images and dimension diagrams please visit the website www.birlea.com
- If you have any issues with your item please contact the retailer directly you purchased it from who will be able to resolve any issues with Birlea.
- Why don't you send us photos of your assembled furniture to info@birlea.com to be shared in our #birleahome feature on Instagram.

Birlea®

Birlea Furniture Limited – Registered Office Unit 6a-1, Birlea Way, West Meadow Rise, Castle Donington, Derbyshire, DE74 2HL, UK



CAUTION:

PLEASE USE HYDRAULIC PUMP STOPPER FOR SAFTTY PURPOSE.

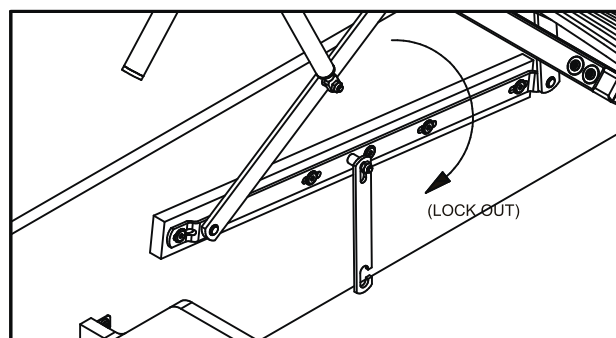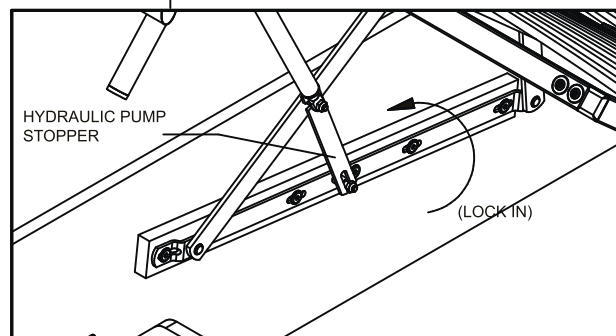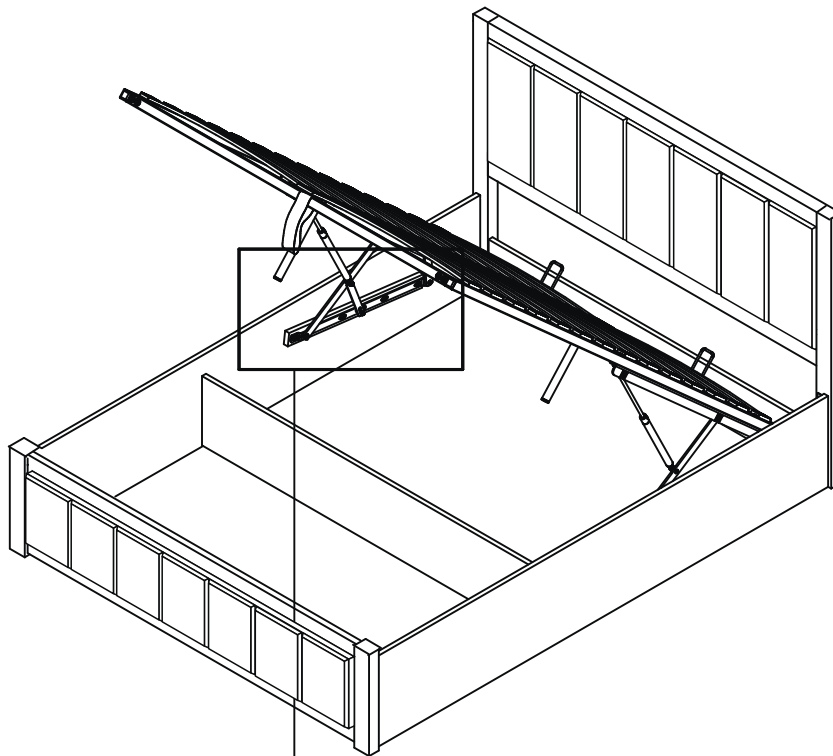

Important Ottoman Safety Warnings

- . Caution. This bed uses a pressurised mechanism.
- . Use caution when operating - Always use two hands at arm's length, and only where illustrated on the product.
- . You must ensure the mattress is on the bed frame before lifting the mechanism - Failure to do so may result in injury.
- . Please ensure Children and pets are kept away from the bed when operating the bed mechanism.
- . If removing the mattress, make sure that the frame is secured as it could flip open.
- . Only use the storage compartment when the frame is fully raised in the 'up' position.
- . No children or animals are left unattended when the frame is in the 'up' position.
- . Do not remain on the bed whilst the lifting mechanism is in use.
- . Beware of Entrapment - Keep both hands clear of mechanism when operating the mechanism.
- . When lifting the bed remove all bedding - Except the fitted sheet.

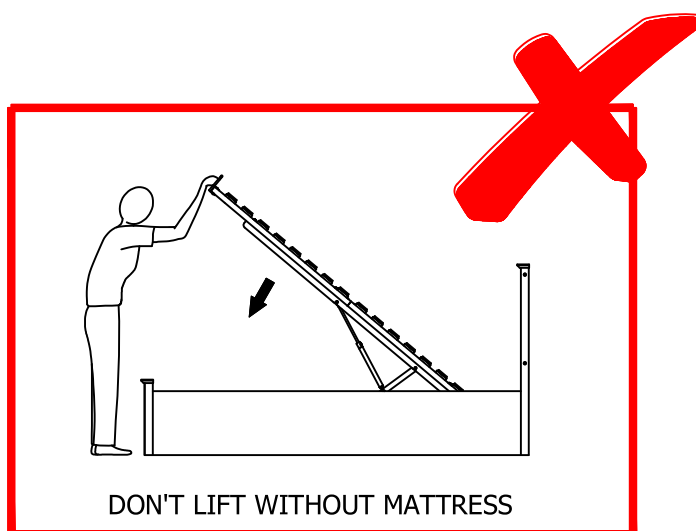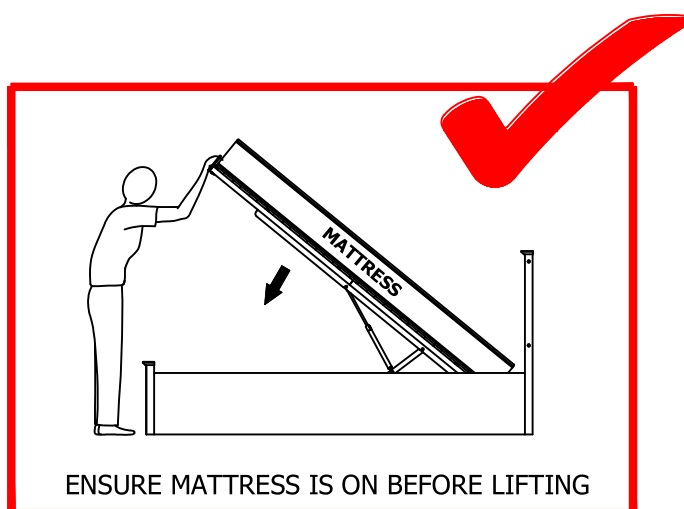

Birlea®